

The EDXtreme dynamometer has five preprogrammed print formats.
Some formats are different if the display mode is configured for viewing live and peak loads.
All lines end with [Carriage return].

Menu path: Setup > PtFmt

<u>Format 1</u>	<u>Format 2 (live & peak)</u>	<u>Format 3 (Fmt 2 w labels)</u>
0.0 lbf	0.0 lbf	Force 0.0 lbf
120.0 lbf	0.0 lbf	Peak 0.0 lbf
160.0 lbf	60.0 lbf	Force 120.0 lbf
	240.0 lbf	Peak 140.0 lbf
<u>If Time & Date are enabled:</u>		
15 May 2020	160.0 lbf	Force 220.0 lbf
10:02:39	240.0 lbf	Peak 220.0 lbf
0.0 lbf		
15 May 2020	<u>If Time & Date are enabled</u>	<u>If Time & Date are enabled</u>
10:02:44	15 May 2020	15 May 2020
180.0 lbf	10:00:43	09:58:40
	0.0 lbf	Force 0.0 lbf
15 May 2020	0.0 lbf	Peak 20.0 lbf
10:02:48		
220.0 lbf	15 May 2020	15 May 2020
	10:00:47	09:58:44
<u>If live & peak view mode</u>	100.0 lbf	Force 120.0 lbf
15 May 2020	140.0 lbf	Peak 140.0 lbf
10:03:41		
0.0 lbf	15 May 2020	15 May 2020
260.0 lbf	10:00:50	09:58:46
	220.0 lbf	Force 180.0 lbf
15 May 2020	240.0 lbf	Peak 200.0 lbf
10:03:46		
60.0 lbf		
100.0 lbf		
15 May 2020		
10:03:55		
320.0 lbf		
320.0 lbf		

Format 4 (Comma delimited)

60.0, lbf, 240.0, lbf

0.0, lbf, 0.0, lbf

180.0, lbf, 200.0, lbf

If Time & Date are enabled

0.0, lbf, 200.0, lbf, 15 May 2020,09:56:18,

180.0, lbf, 200.0, lbf, 15 May 2020,09:56:22,

240.0, lbf, 260.0, lbf, 15 May 2020,09:56:29,

Format 5 (Tab delimited)

This format is adding an extra zero to each line for an unknown reason.

40	lbf	0				
160	lbf	0				
160	lbf	0				
If live & peak mode						
40	lbf	180	lbf	0		
280	lbf	300	lbf	0		
20	lbf	300	lbf	0		
If Time & Date						
15-May-20	9:50:32	40	lbf	0		
15-May-20	9:50:39	100	lbf	0		
15-May-20	9:50:52	200	lbf	0		
15-May-20	9:51:10	100	lbf	220	lbf	0
15-May-20	9:51:11	140	lbf	220	lbf	0
15-May-20	9:51:22	200	lbf	240	lbf	0